




MADHOUSE DESIGN GUN CONTROL SYSTEM

SAFE DOOR MOUNT—ASSEMBLY AND MOUNTING INSTRUCTIONS

MADHOUSE DESIGN assumes no responsibility for the validation of your safe warranty.

PARTS


2 RAILS
2 SUPPORT RODS
2 BRACKETS
4 FLAT HEAD SCREWS
4 SELF-TAPPING SCREWS
1 5/32" DRILL BIT
1 .050" ALLEN WRENCH
1 1/8" ALLEN WRENCH

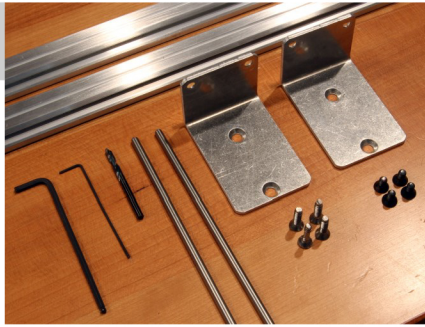

STEP 1


PLACE RAILS PARALLEL AND INSERT SUPPORT RAILS AT BOTH ENDS.

SEPARATE RAILS AT BOTH ENDS 5 1/4" MAX FROM THE OUTSIDE EDGES.

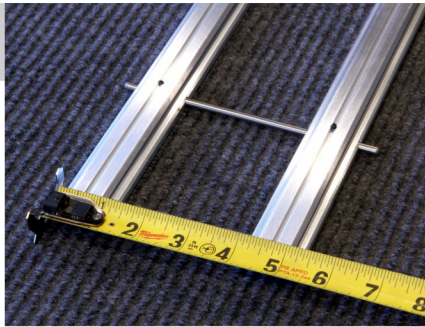


STEP 2

SECURE SUPPORT RODS WITH .050 ALLEN WRENCH. (4 PLACES)

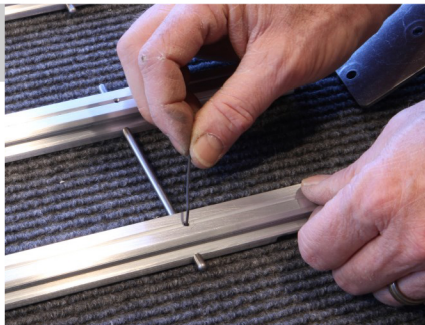


STEP 3

FLIP RAILS OVER TO SECURE BRACKETS TO BACK OF RAILS.

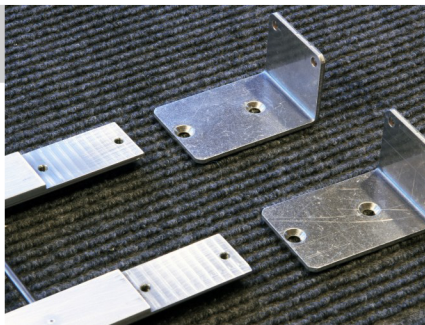

STEP 4

SECURE BRACKETS TO RAILS WITH FLAT HEAD MACHINE SCREWS WITH 1/8" ALLEN WRENCH. (4 PLACES)

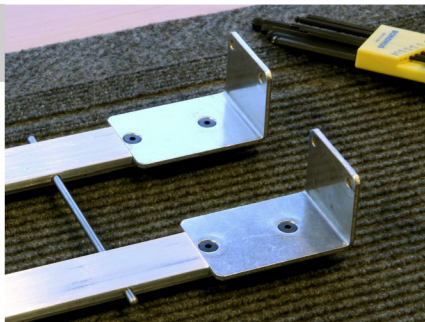

STEP 5

LOCATE BEST POSITION TO MOUNT ASSEMBLED RAILS. PLACE AS CLOSE TO CENTER OF SAFE DOOR AS POSSIBLE.



STEP 6

KEEP RAILS CLOSE TO THE DOOR AND DRILL PILOT HOLES WITH 5/32" DRILL. USE THE HOLES IN THE BRACKETS FOR GUIDES OR MARK POSITIONS, REMOVE RAILS, AND DRILL PILOT HOLES. (4 PLACES)



STEP 7

MOUNT RAILS WITH SELF-TAPPING SCREWS USING A PHILLIPS DRIVER. GO SLOWLY! DO NOT OVER TIGHTEN TO AVOID STRIPPING OUT THE THREADS



STEP 8

PLACE THE PISTOL MOUNTS ON RAILS.

POSITION WHERE NEEDED AND SECURE.



STEP 9

PLACE PISTOLS ON PISTOL MOUNTS.

